
## **Getting to know your telephone**

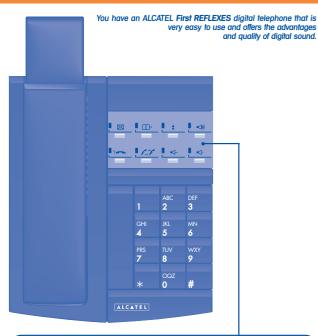

### **Preprogrammed keys**

Access the various mail services.

Divert your calls to another directory.

Access your personal directory.

Cancel an enquiry call.

Automaticaly redial the last number dialled.

 
#### **Audio kevs**

- Loudspeaker.
- or receiver volume.
- To increase loudspeaker or receiver volume.

### Installing the preprogrammed key label

A printed label is supplied with the terminal. This should be installed between the preprogrammed keys.

- Insert a flat "blade" into the slot.
- Raise the cover.
- Slide the printed label into position.
- Replace the cover.

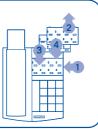

#### **MAKING A CALL**

#### Making an outside call or an internal call





outside line

for an









for the operator

dial the number for your call

### Calling a second person during a conversation

You are in conversation



the first call is on hold



dial number required

cancel second call

### Calling from the directory

■ Personal directory















### **Redial / Callback**

directory

■ By last number dialled



By deferred callback request number busy





message

#### **Automatic callback**

redial



number busy





code for function "Callback"

### Call pick-up

another telephone is ringing







code for function "Pick-up"

number of telephone ringing

#### **ALCATEL OFFICE\***

#### Table of codes

A function is activated by entering the corresponding code on the keypad.

Function	Default code	Your	Function	Default code	Your
Answer general bell	15		Hunting group out	66	
Answer paging	49		Immediate diversion	61	
Appointment time			Intrude on a call	7 or A	
(programmed)			Line allocation		
Automatic callback if	19 or #		Line allocation +		
terminal busy			callback with charge info.		
Broadcast groups	41 to 48		Locking/Unlocking	17	
Broker call	2		Meter Total Recall		
Business account code			Moving a terminal	748	
Calibrated break	66		Open door		
Cancel all diversions	60		Operator call	0	
Cancel automatic callback	19		Paging	40	
Cancel enquiry call	3		Park / retrieve parked call	12	
Cancel follow me	69		Protect a call	89	
Common directory numbers	7000		Redial last number	40	
	to 7399		Replacing a terminal	747	
Conference	50		Seize main line	9	
Consult voice messages			Seize secondary lines	82 to 88	
Consultation of call on hold	14		Selective diversion		
Divert group calls	65		Substitution		
Divert if busy	62		(business charge code)		
Divert to paging	64		Switch to programming	800	
Do not disturb	63		Terminal call	200	
DTMF End to End	69 or D			to 399	
Follow me diversion	68		Terminal call pick-up	13	
Group call	51 to 58		Text message (call back later)	50	
Group call pick-up	14		Voice message	806	
Hunting group in	67		(codes reserved)	and 807	

Your telephone provides access to a number of functions, depending on your system version and configuration.

You can programme keys as required and print new labels. See the installation guide or contact your distributor.

Vame:	Telephone No.:
Eav No:	Mobile No:

Alcatel Business Systems reserves the right to modify without notice the characteristics of its products in the interest of its customers. Alcatel Business Systems - 56, avenue Jean-Jaurès - 92707 Colombes Cedex R.C. Paris 602 033 185

\*ALCATEL 4200 Ref.: 3AK19041 ENAA Ed. 01

#### SETTING UP

### Selecting ringer tune and adjusting volume













code for present function tune "Switch to programming"

consecutive presses to obtain tune (8)

consecutive presses to adjust volume (7)

### Locking/unlocking your telephone





function "Locking/

Unlocking"





code 1515









to unlock

to lock code (4 digits) Default

#### **CUSTOMISING YOUR TELEPHONE**

### **Programming your personal code**

The default code on your telephone is 1515.







"Switch to programming"









(4 digits)





### **Programming your personal directory**

Create your directory using the 10 keys (0 to 9) on the keypad.









0 to 9







Internal or outside number to be entered

Personal directory numbers				
0	6			
0	6			
2	7			
3	8			
4	9			

#### **HANDLING SEVERAL CALLS**

#### Receiving a second call

You hear a beep.



code for function "Consultation of call on hold"

### **Broker call**

To switch between two calls, alternately,



code for function "Broker call"

### Transferring a call

You are in conversation.





number to be called

### Conference

For three-way conference.





code for function "Conference"

same key to cancel

#### WHILE YOU ARE AWAY - WHEN YOU RETURN

### **Diverting calls**

■ To another terminal





destination number

■ To recorded message (option)









code for function number of type of diversion required message service

### **Cancelling diversions**



programme another type of diversion

### Replying to callback request













originator of request is called back

### **Consulting recorded messages (option)**











follow voice instructions

light flashes

code for function "Voice message"



# ALCATEL

REFLEXES

